


# SYNC® Connect<sup>(1)</sup> Powered by FordPass™<sup>(2)</sup>

SYNC Connect remote features are available for five years from the vehicle sale date.

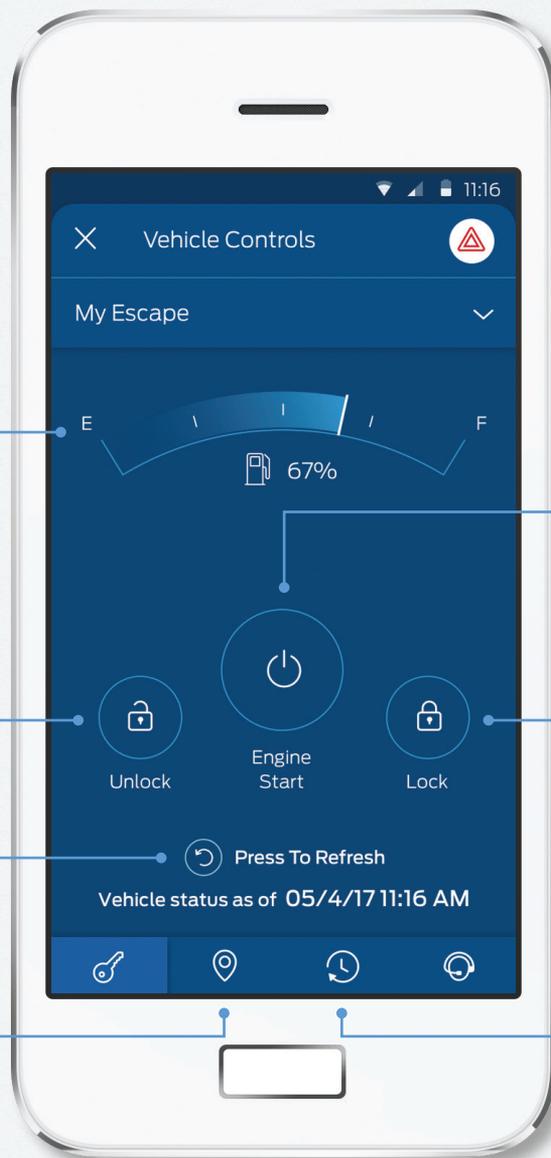

## VEHICLE STATUS

Check fuel level to plan ahead if you need to make time to refuel. Check approximate mileage and miles until the next service is needed

## UNLOCK

Press and hold to unlock the doors from virtually anywhere

## REFRESH

Press to refresh vehicle status

## VEHICLE LOCATOR

Press to see the location of your parked vehicle. This makes it convenient for members to quickly find and get back to their parked vehicle

## REMOTE START

Press and hold to start the engine, which runs for 5, 10 or 15 minutes based on your vehicle settings for remote start. If you select Auto or Last Setting in the vehicle, the vehicle will be at the same temperature and fan speed as previously selected

## LOCK

Press and hold to lock the doors from virtually anywhere

## SCHEDULED REMOTE STARTS

Press to schedule remote starts for specific times and days of the week

## Activate SYNC Connect With These Easy Steps

1. Download the FordPass app.
2. Create an Account or log in.
3. Create a PIN.
4. Add your SYNC Connect-equipped vehicle to My Vehicles by scanning the VIN barcode.
5. Tap the Activate icon from the FordPass Vehicle Controls or My Vehicles card.
6. Start the vehicle and touch Allow on the in-vehicle pop-up.
7. 24 hours later, touch Allow on the second in-vehicle pop-up.



(1) SYNC Connect, an optional feature on the 2017 Ford Escape, Fusion and Fusion Hybrid, and F-150, is required for certain features.  
(2) FordPass, compatible with select smartphone platforms, is available via a free download. Message and data rates may apply.